

## TV remotes

Throughout the home you will see RTI remotes. These remotes are configured for the rooms they are in, and only those rooms.




Press the home button to display the home page options. To watch TV press the Watch DirecTV option. Wait up to 1 minute for all equipment to power on and display.

Press the guide button to display the channel guide and the up/down buttons to navigate. Press OK to select desired channel.

If you see a 771 error on a TV it is most likely because the channel selected is not available. Manually enter channel 1 and press 'ok' or choose a channel from the shortcut buttons.

Each TV is also equipped with a Roku device for easy streaming of your favorite apps. Simply choose Watch Roku to access the Roku menu. You will notice familiar on remote screen buttons for ease of Roku operation.

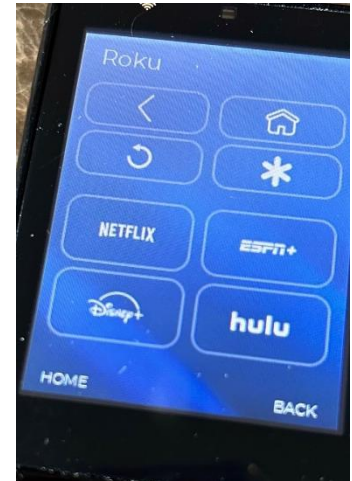

Many rooms also have a Blu-Ray player available as well. If you wish to watch a DVD or Blu-Ray select this option and insert the desired disk.

Press the red circle then choose Power System Off when done viewing.

If you are having trouble, first attempt a "System Off" reset, wait 1 minute, and power the system back on.